
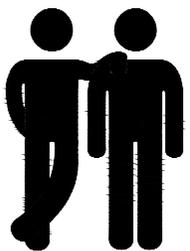










70868

Cabinet Tresor White Pink 165x166cm

KARE
DESIGN








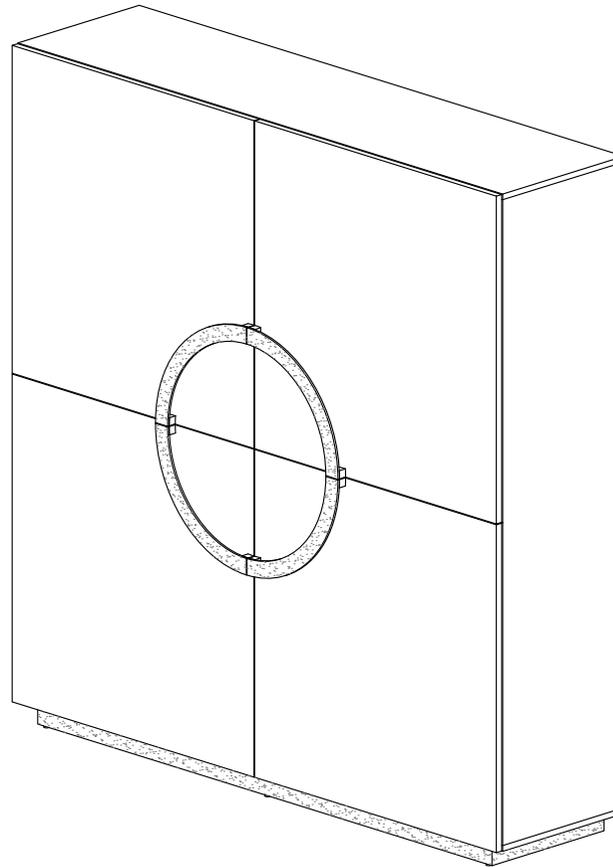


- A**  Ø15*12 = 44x
- B**  Ø8*40 = 20X
- C**  Ø7*32 = 44X
- D**  M4*25 = 16X
- E**  Ø35 = 12X
- F**  M4*16 = 72X
- G**  Ø6*16 = 32X
- H**  46*16*13 = 4X
- I**  Ø3*16 = 16X

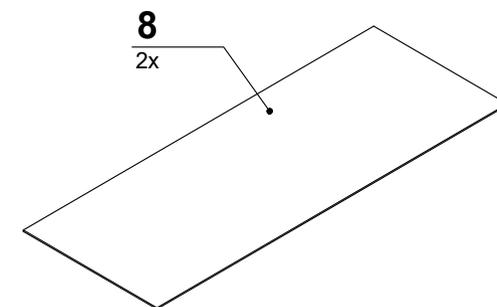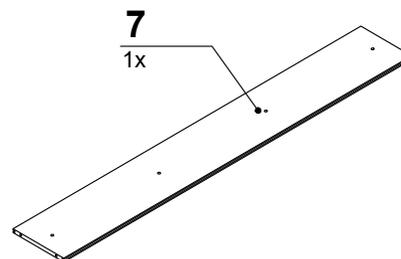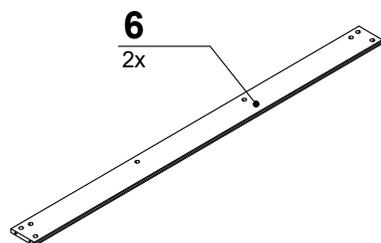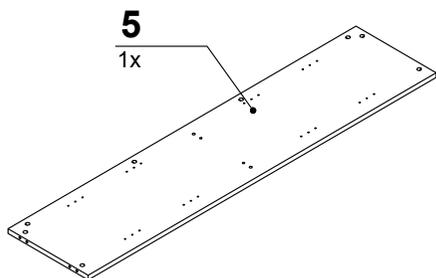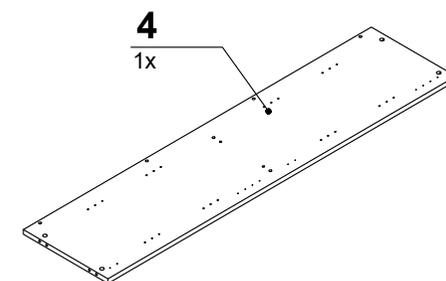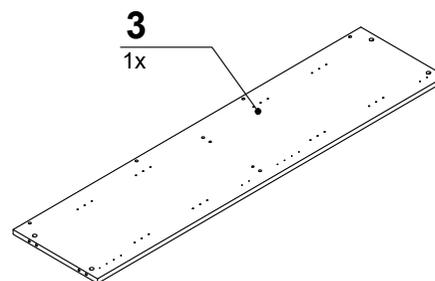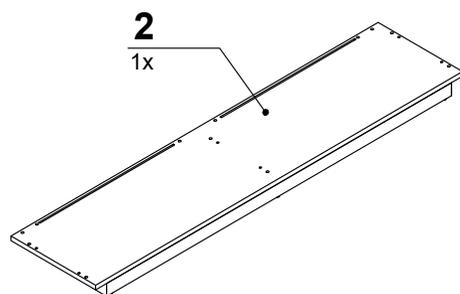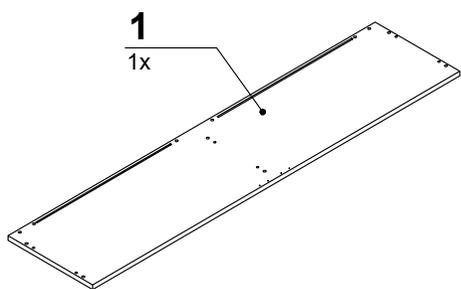








70868

Cabinet Tresor White Pink 165x166cm

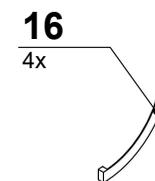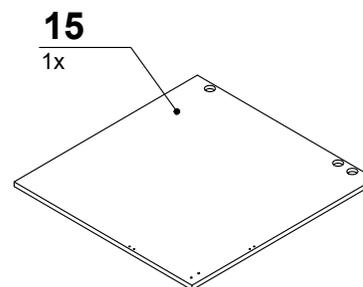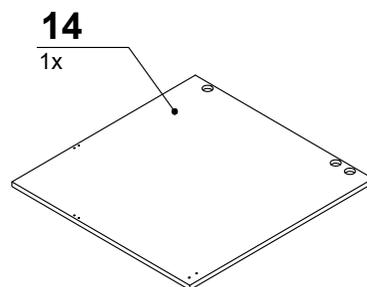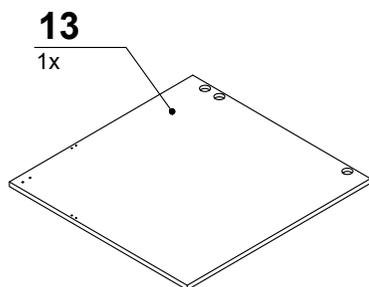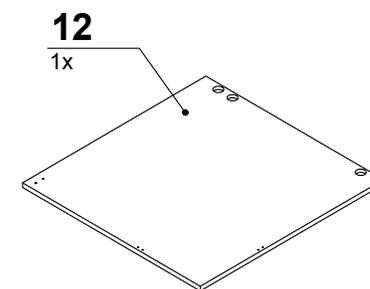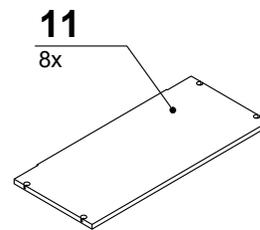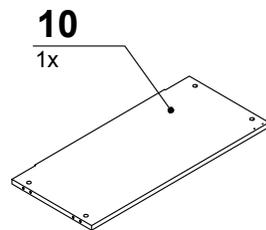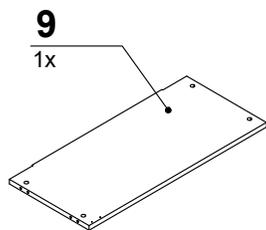

70868






Cabinet Tresor White Pink 165x166cm

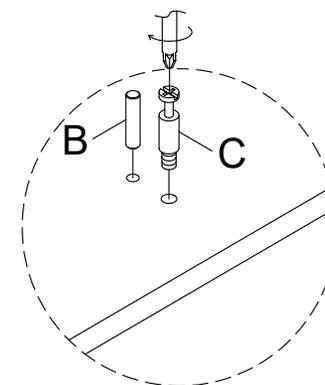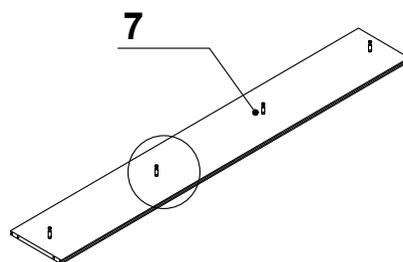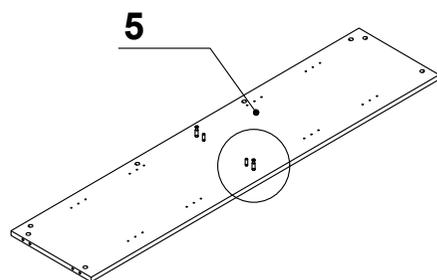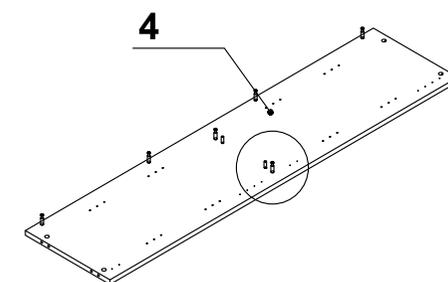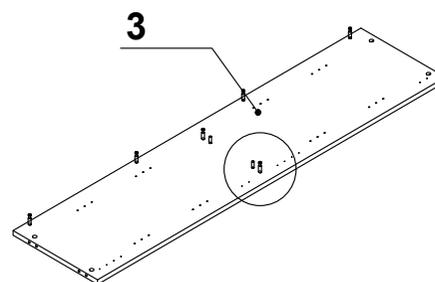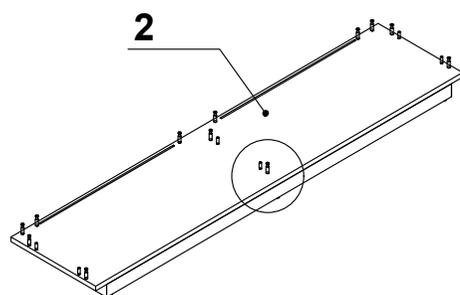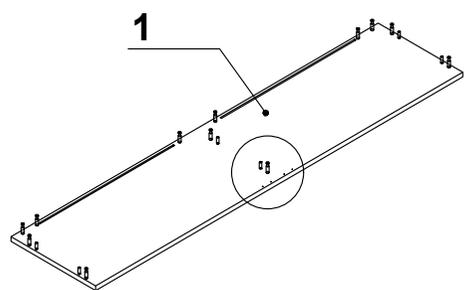

1

70868

Cabinet Tresor White Pink 165x166cm

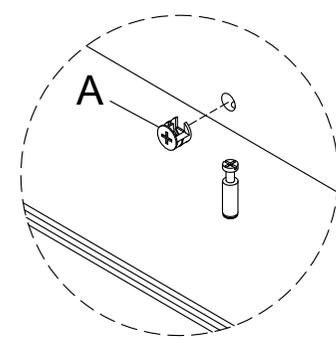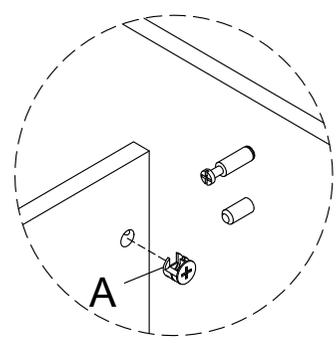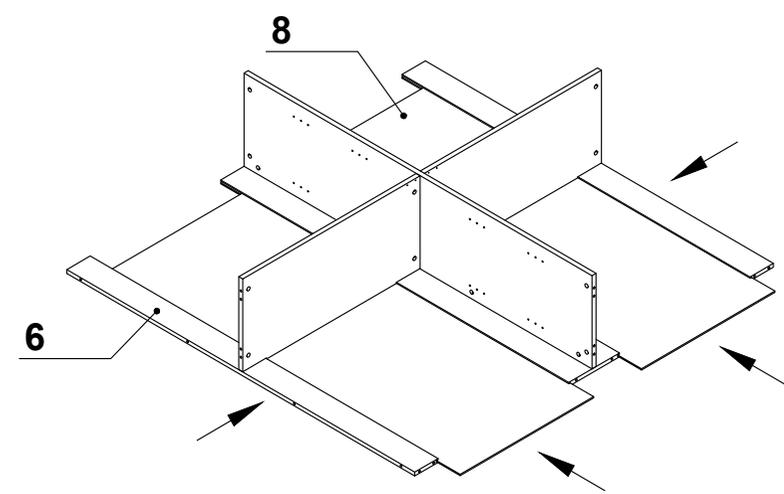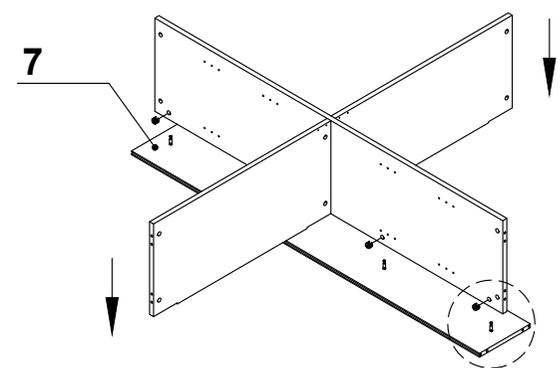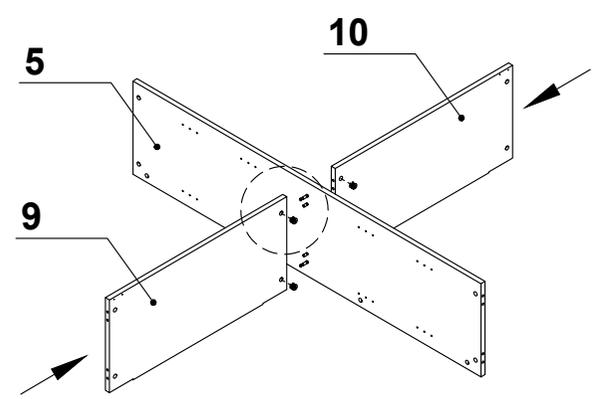




2

3


4

70868

Cabinet Tresor White Pink 165x166cm

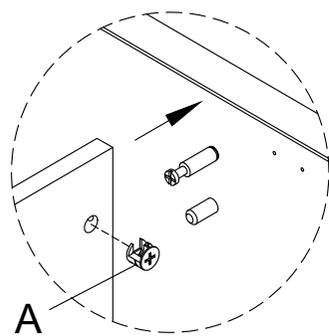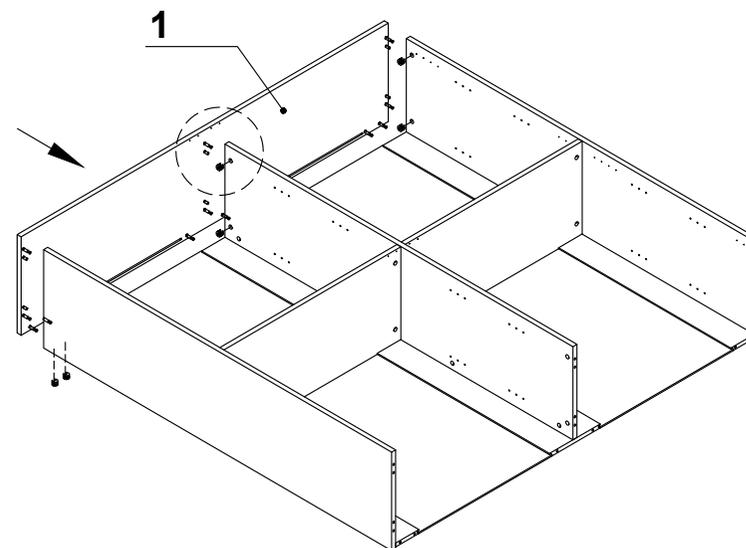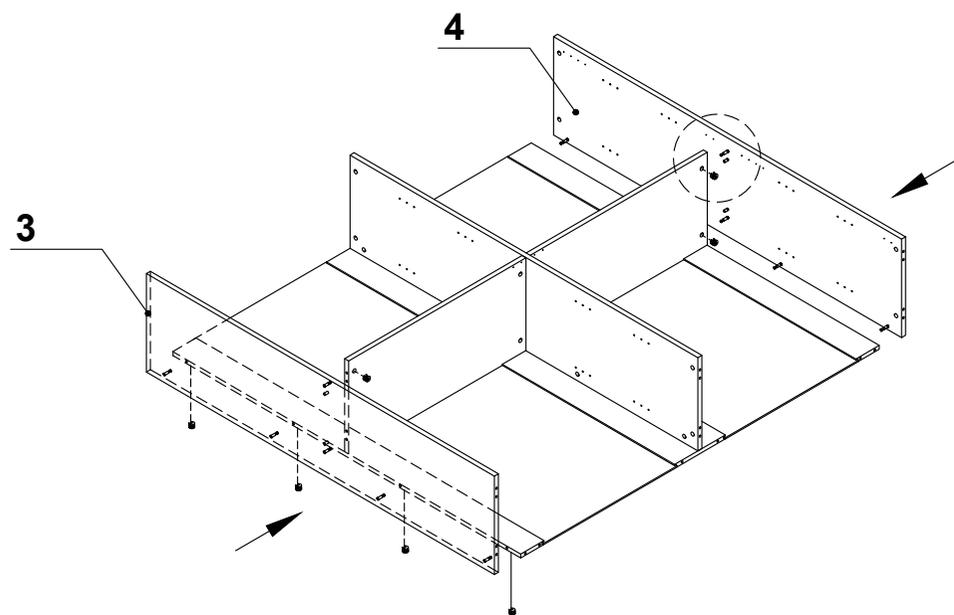




5

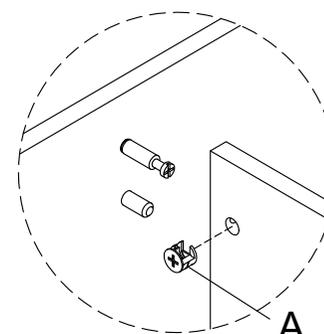


6

70868

Cabinet Tresor White Pink 165x166cm

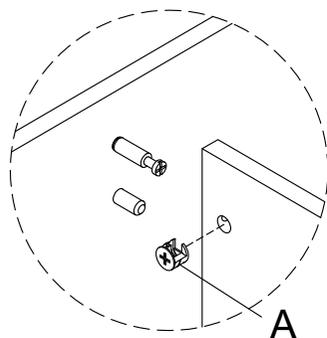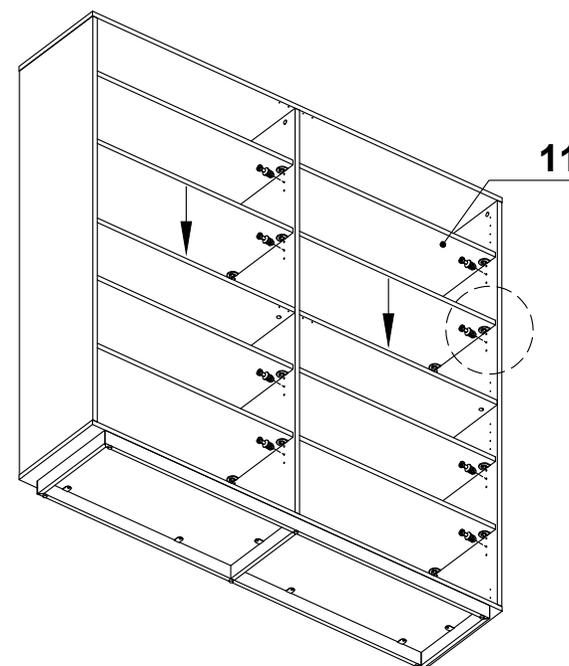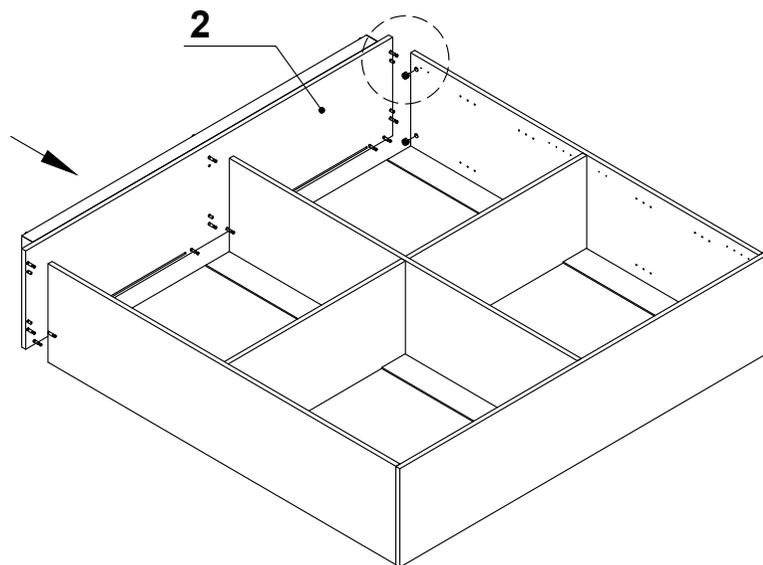






7



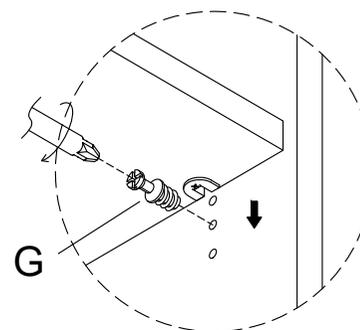


8

70868

Cabinet Tresor White Pink 165x166cm

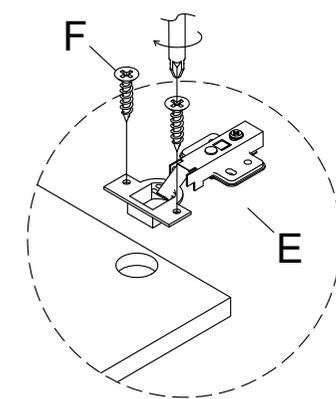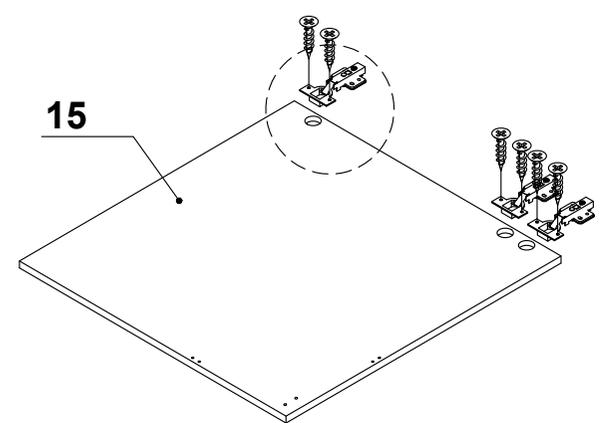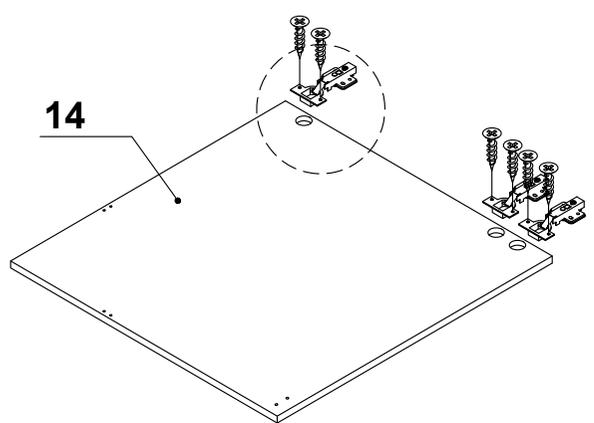
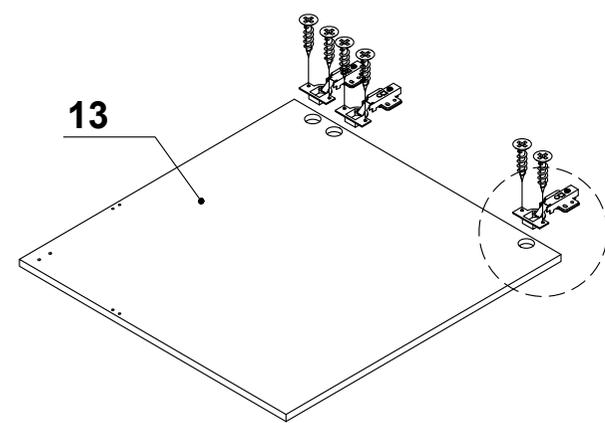
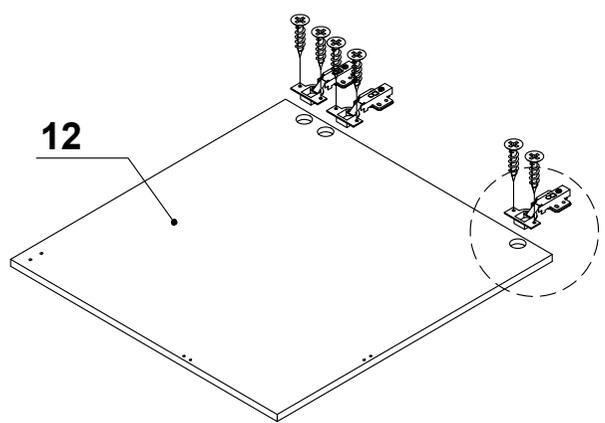


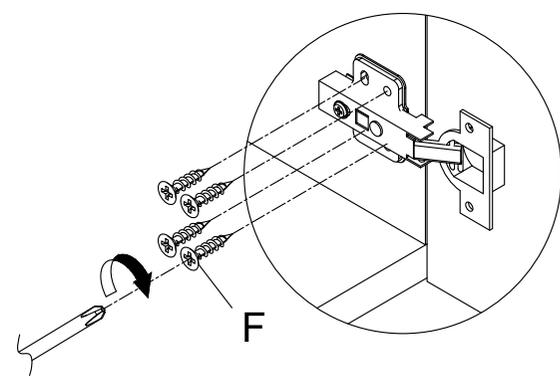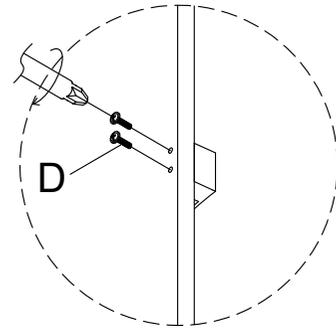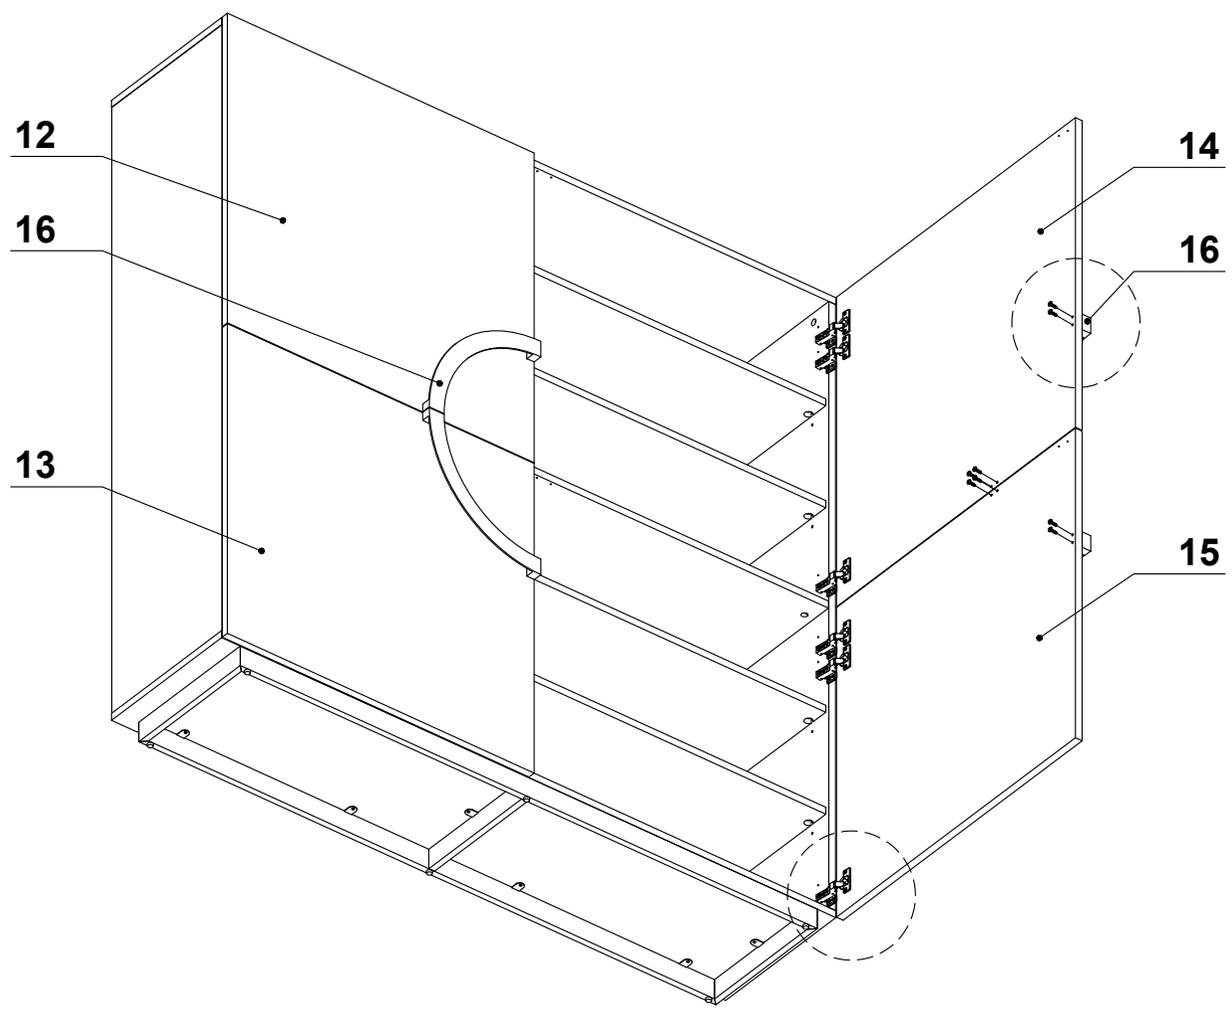

10

70868

Cabinet Tresor White Pink 165x166cm

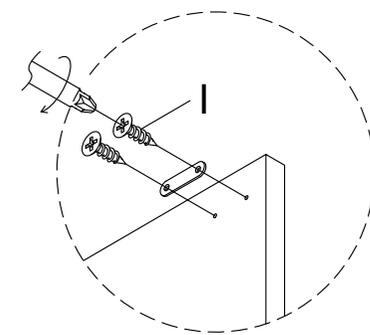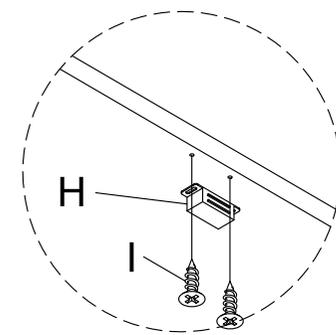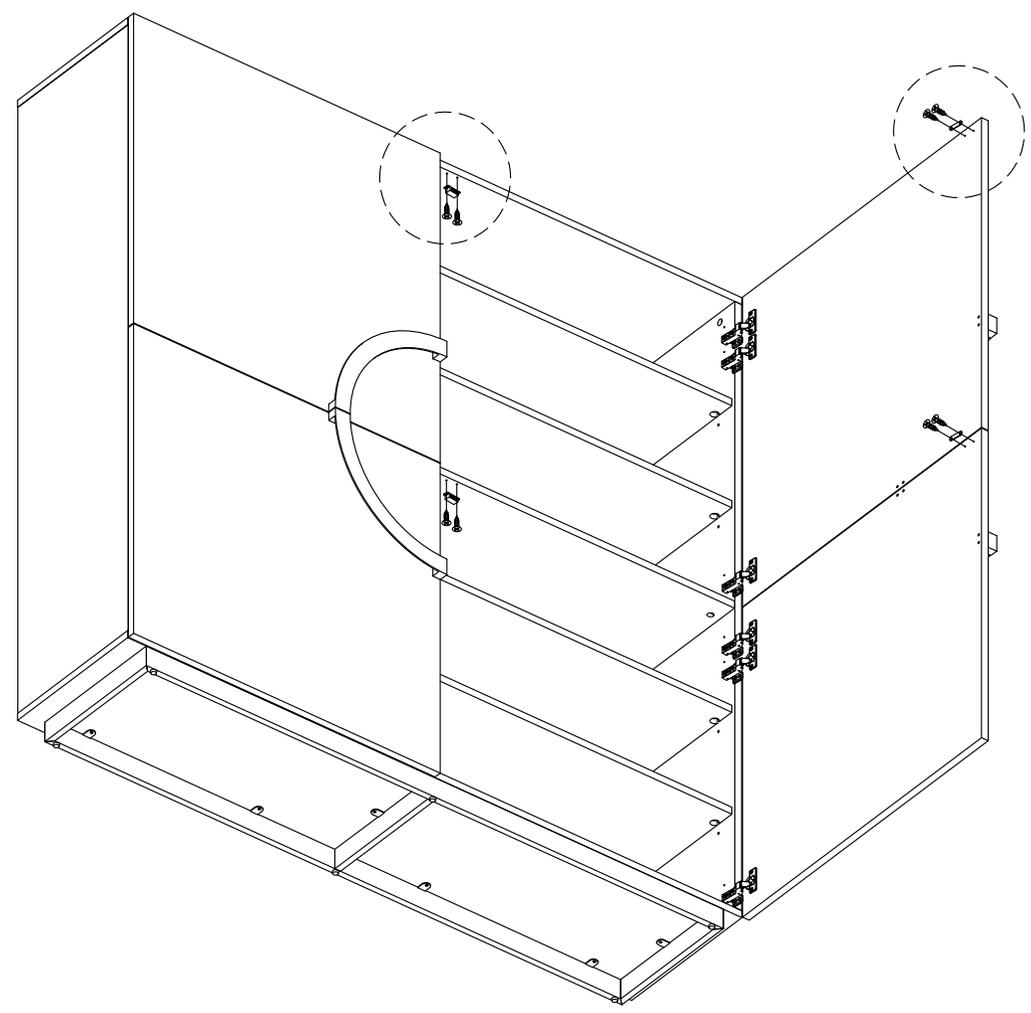

11

70868

Cabinet Tresor White Pink 165x166cm