


Assembly Instruction

84921 - MUSKAT WARDROBE 2 DOOR 2 DRW 115 X 50 X 180

KARE
DESIGN

Parts

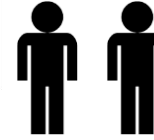

This assembly required
two people

Step1



Step 2



Code	Description	Qty
1	ALAN KEY BOLT	10
2	BRASS KNOB	4
3	Key (alan key 1)	01

