
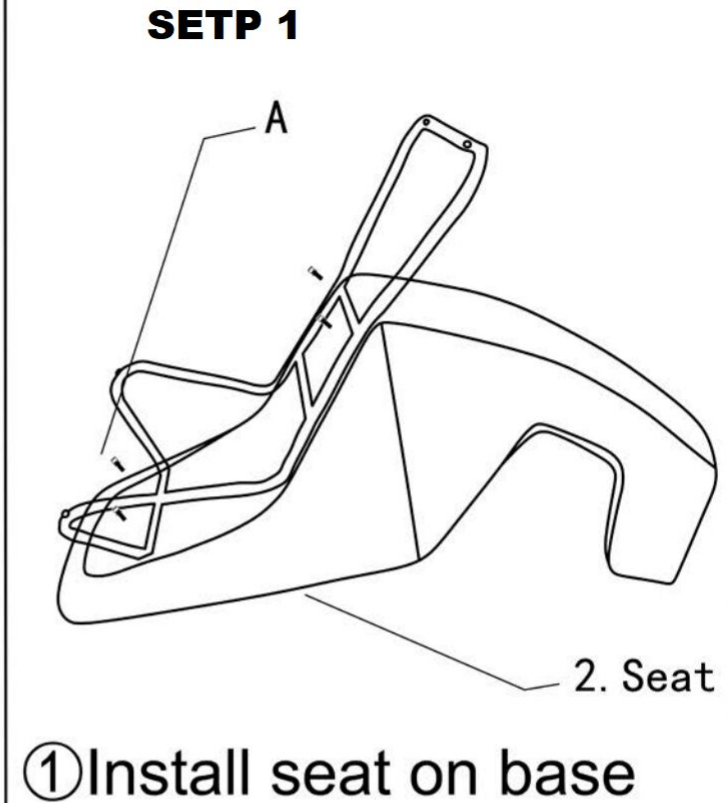


**KARE**  
DESIGN

80033 — **Armchair Granada**  
85761 — **Armchair Granada**  
85763 — **Armchair Granada**

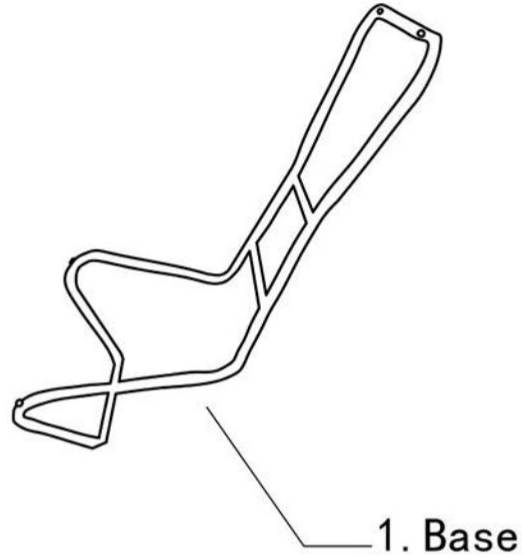

## ASSEMBLY INSTRUCTION

A


Allen key



1PC



M6\*20

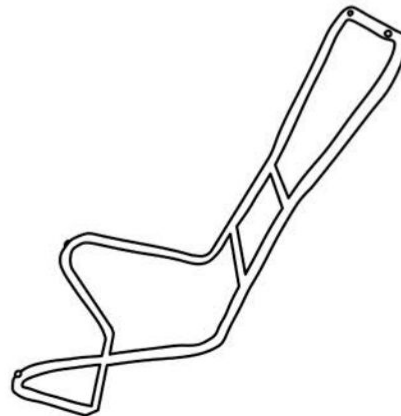

1. Base



2. Seat